

Adjustable Base


Locking Caster & Caster Cup

User Guide

LOCKING CASTER SAFETY FEATURE

Casters can be used with some adjustable bases. If casters are installed, casters should be placed in caster cups.

- Insert (press-fit) locking caster into base leg.
- Rotate base top-side-up, placing leg into caster cup (situated on floor surface).
- Push down on the caster lock tab to engage lock and prevent caster from moving.

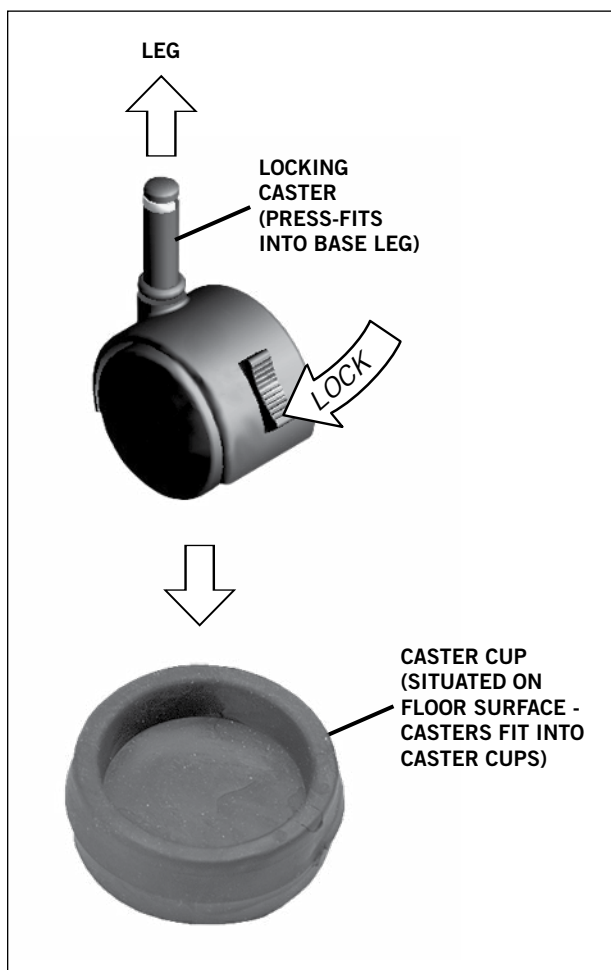

WARNING

ADJUSTABLE BASES EQUIPPED WITH LOCKING CASTERS *MUST* USE CASTER CUPS TO PREVENT BASE FROM SLIDING.

WARNING

AT LEAST TWO PEOPLE ARE RECOMMENDED FOR HANDLING AND MOVING ADJUSTABLE BASE.